



2. PARTS DESCRIPTION

2.1 BOX CONTENT

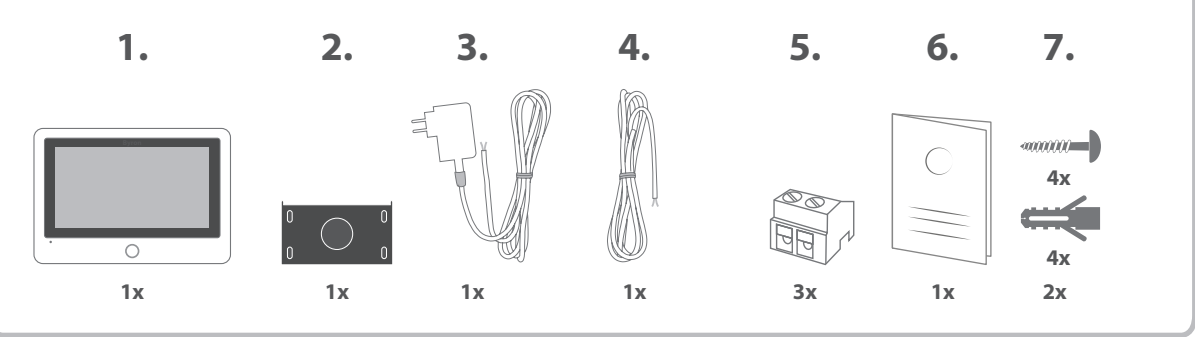


2.2 INDOOR UNIT (MONITOR)

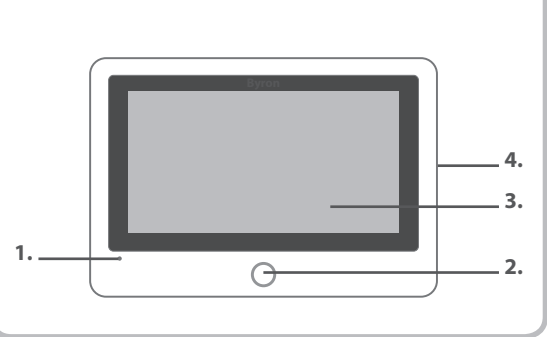


3. INSTALLATION


3.1 FIX THE MOUNTING PLATE OF THE INDOOR UNIT (MONITOR)

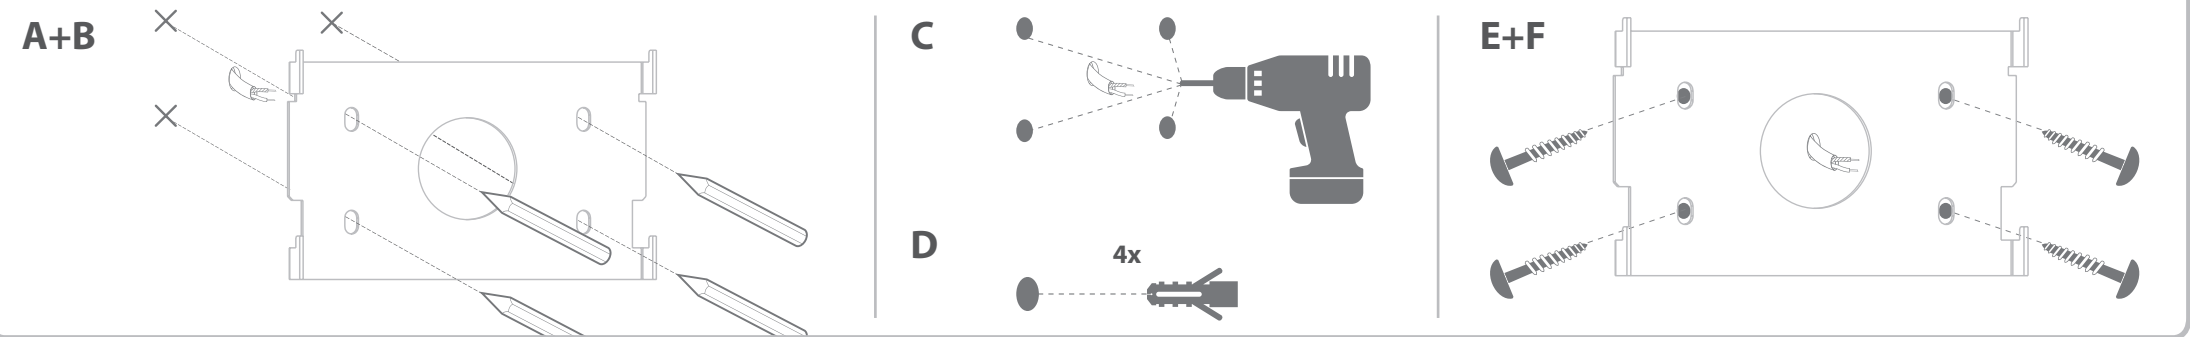


3.2 ELECTRICAL INSTALLATION

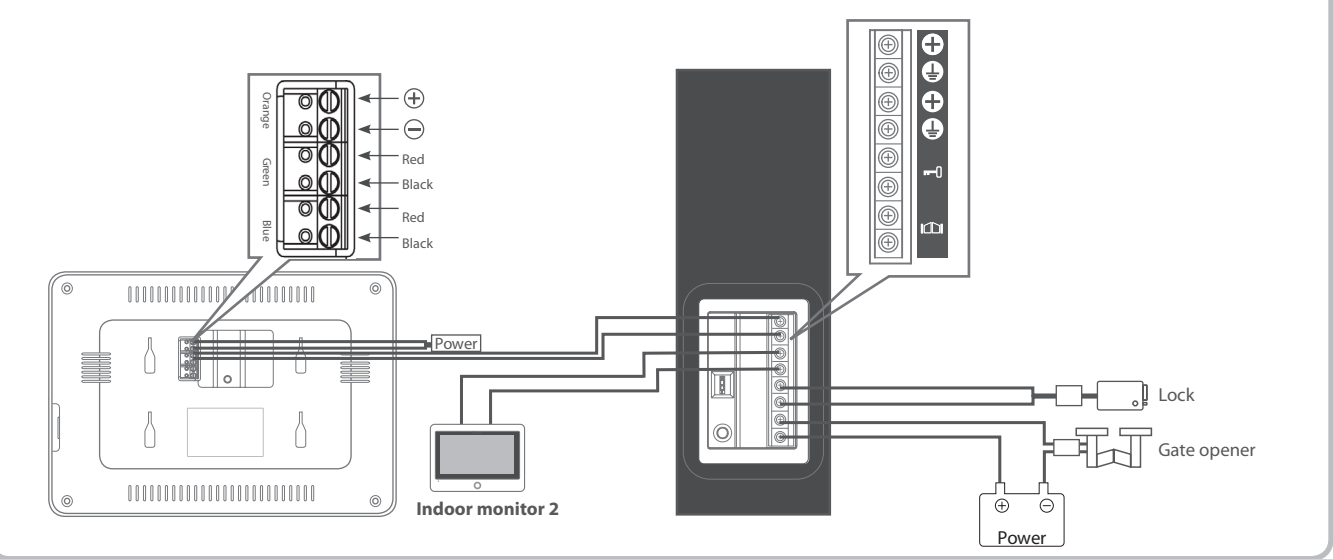


3.2.1 CONNECTING THE TERMINAL BLOCKS (MONITOR AND OUTDOOR UNIT)

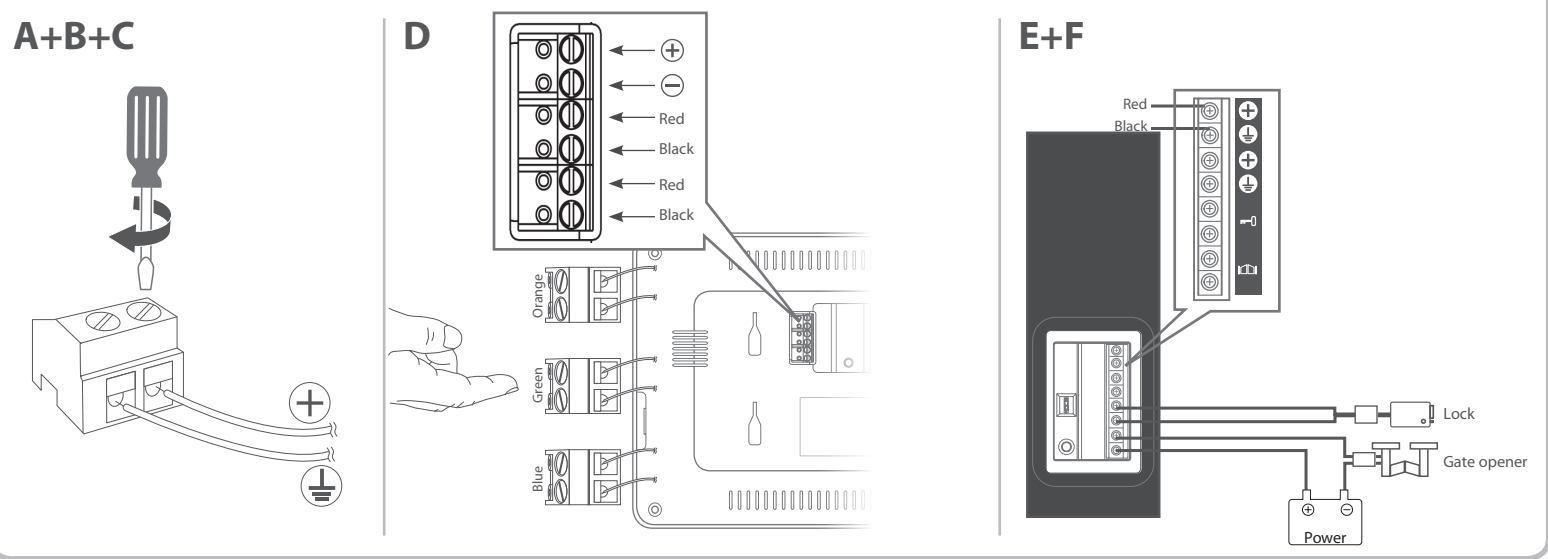


3.2.2 MOUNT THE INDOOR UNITS AND OUTDOOR UNIT

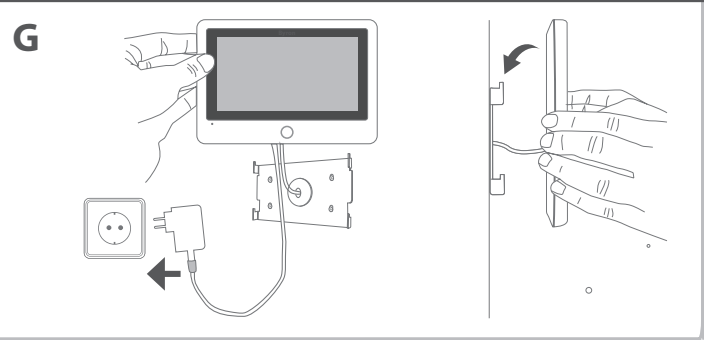

3.2.3 CONNECTING AN ADDITIONAL MONITOR (NOT INCLUDED)

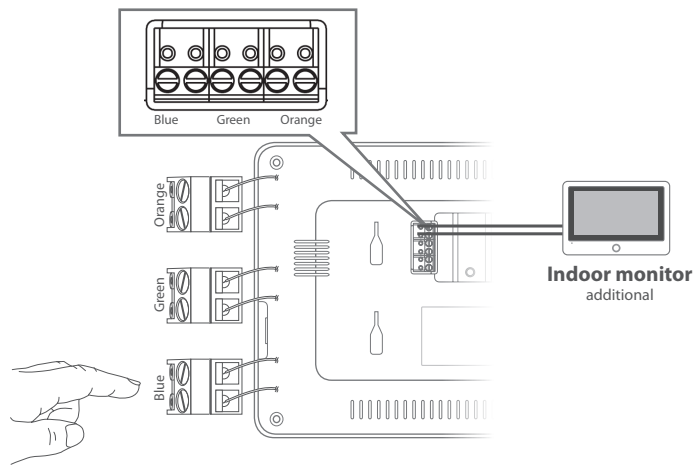


3.2.4 CONNECTING THE AC POWER

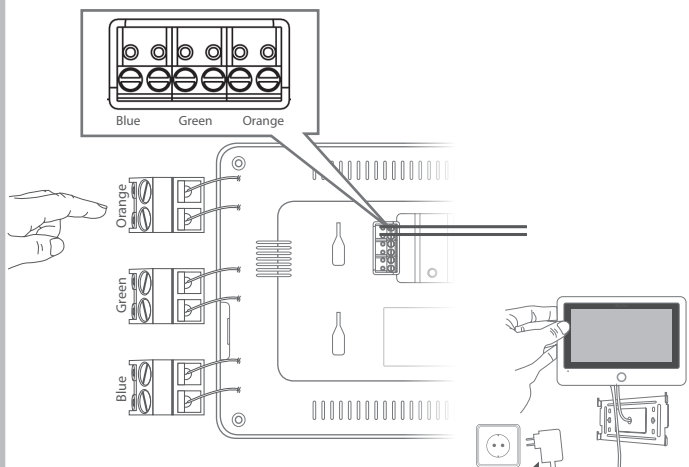


4. BASIC FUNCTIONS


4.1 ANSWERING A CALL

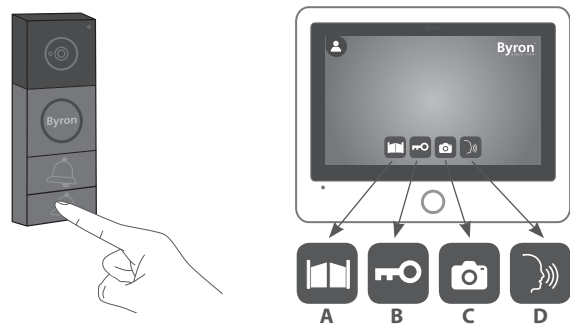


5. HOME SCREEN AND MENUS

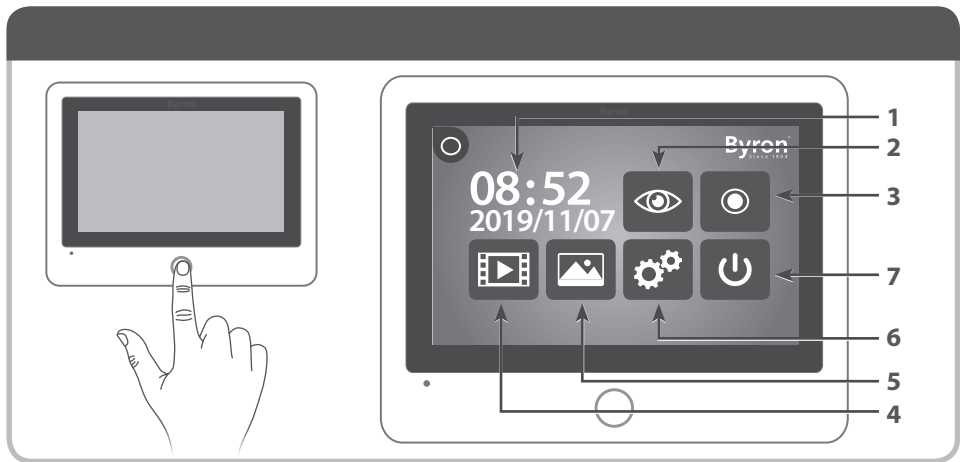


5.1 MONITOR MENU

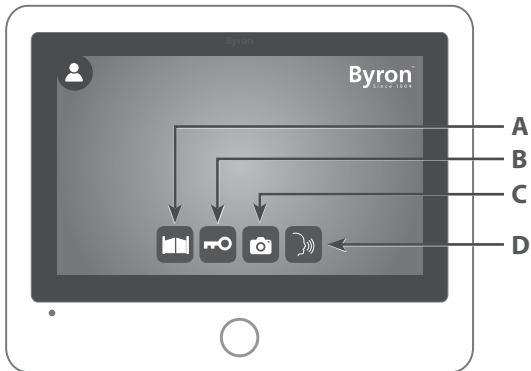


5.2 INTERCOM MENU

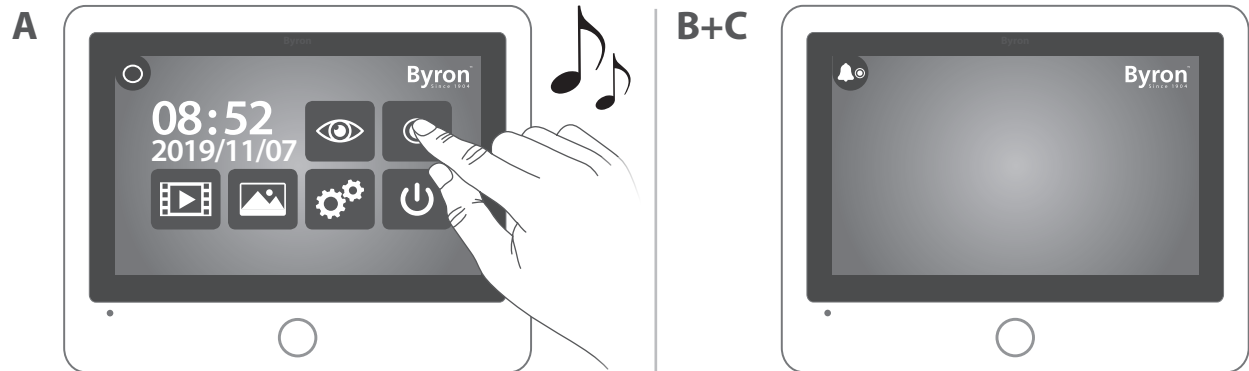


5.3 RECORDING PLAYBACK MENU

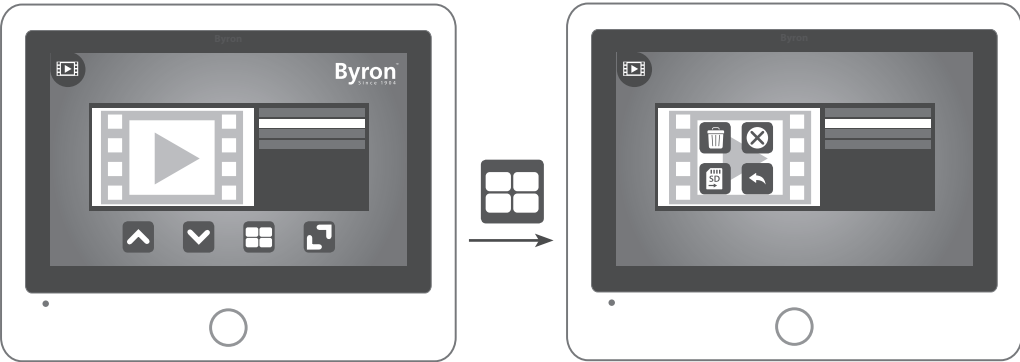


5.4 PHOTO MENU

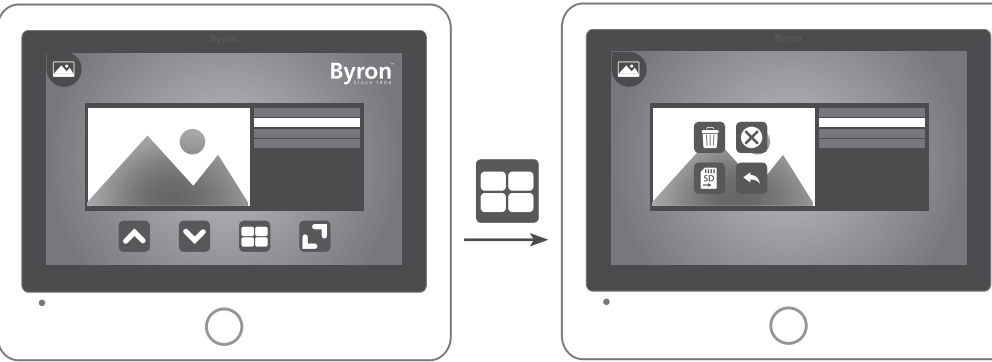


5.5 SETTINGS MENU

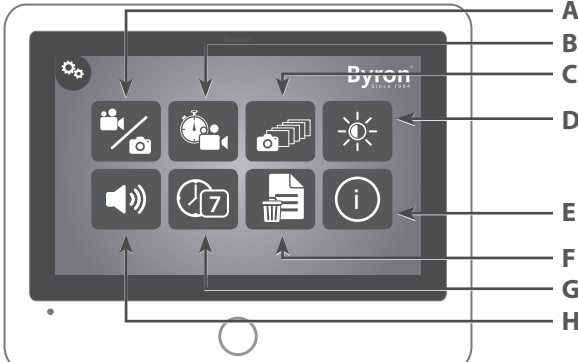


5.5.1 SELECT PHOTOS OR VIDEO RECORDINGS

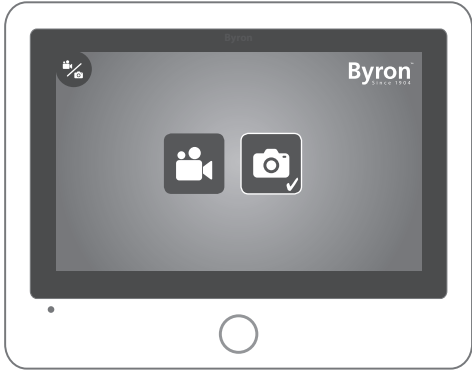


5.5.2 VIDEO DURATION

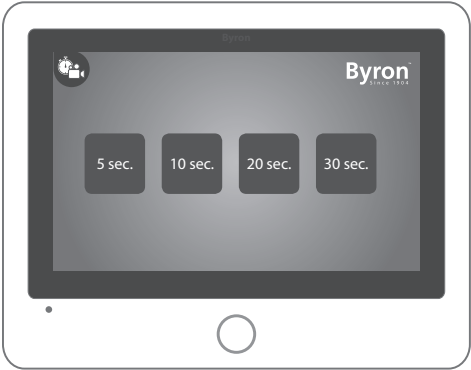


5.5.3 NUMBER OF PHOTOS

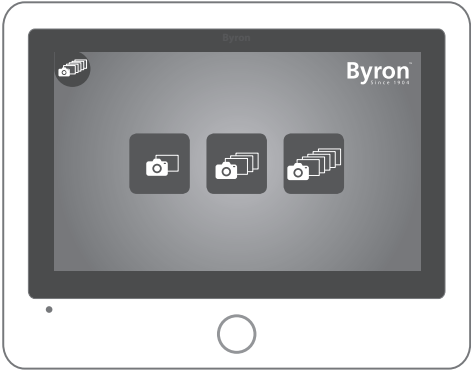


5.5.4 IMAGE SETTINGS

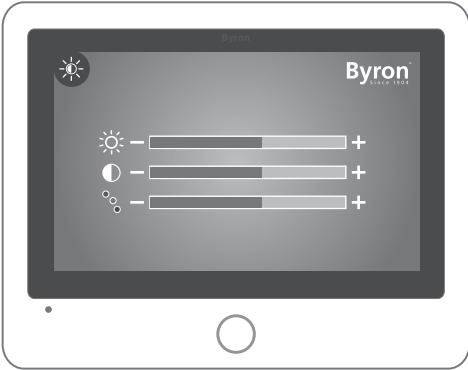


5.5.5 CUSTOMER SERVICE INFORMATION

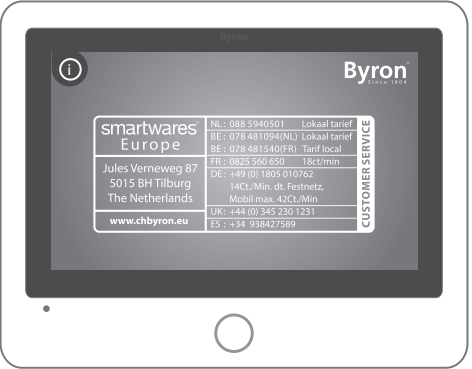

5.5.6 FORMATTING MICROSD CARD / INTERNAL MEMORY

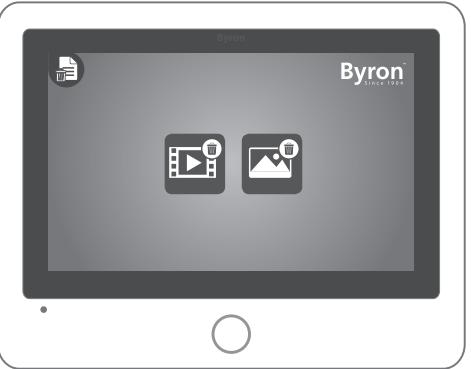

5.5.7 DATE AND TIME SETTINGS

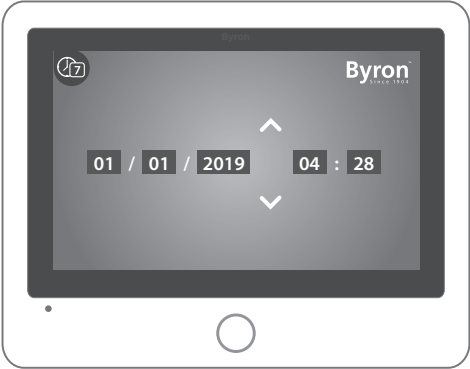

5.5.8 RINGTONE AND VOLUME

